

F-4: HOPPER BASE ASSEMBLY

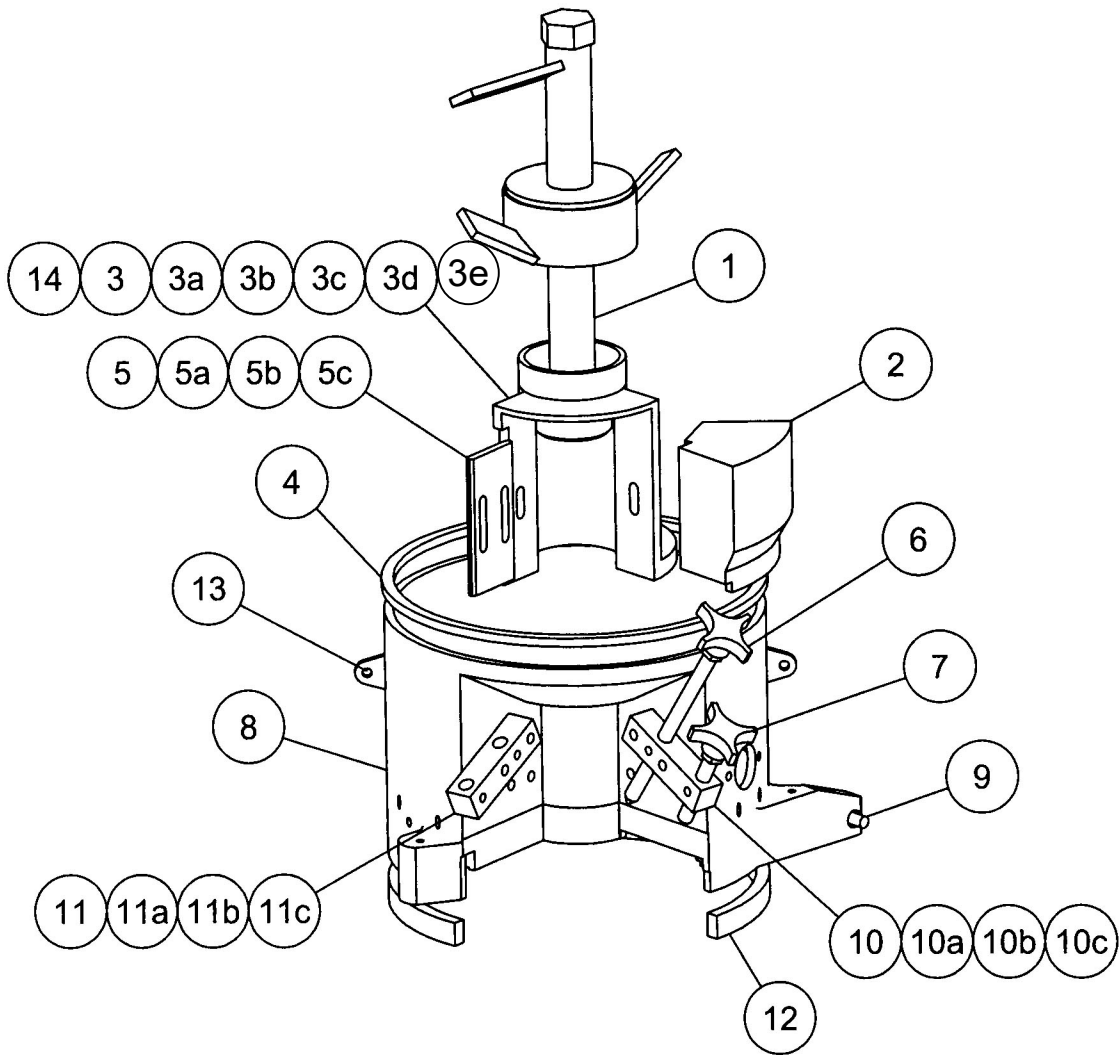


FIGURE 38

HOPPER BASE ASSEMBLY

NO.	P/N	QTY	DESCRIPTION
1a	705412	1	AGITATOR SHAFT (1" OR 2" WEAR PLATE)
1b	705867*	1	AGITATOR STUB (1" OR 2" WEAR PLATE)
1c	705684	1	AGITATOR SHAFT (3" WEAR PLATE)
1d	705697*	1	AGITATOR STUB (3" WEAR PLATE)
2	705379	1	EXHAUST CHAMBER
3	705354	1	POCKET SHIELD
3a	8024062	2	BOLT
3b	8177012	2	LOCKWASHER
3c	8142003	2	NUT
3d	705375	2	SHIELD BRACE
3e	8172009	2	FLAT WASHER
4	705376	1	RUBBER SEAL
5	705229	1	ROCK SHEAR
5a	8024059	2	BOLT
5b	8177012	2	LOCKWASHER
5c	8143003	2	NUT
6	705263	2	PAD HOLD DOWN SCREW - LONG
7	705264	2	PAD HOLD DOWN SCREW - SHORT
8	705084	1	HOPPER BASE
9	705502	1	PIVOT PIN
10	705331	1	SCREW LUG - RIGHT
10a	8041052	2	BOLT
10b	8177012	2	LOCKWASHER
10c	8172009	2	FLAT WASHER
11	705212	1	SCREW LUG - LEFT
11a	8041053	2	BOLT
11b	8177012	2	LOCKWASHER
11c	8172009	2	FLAT WASHER
12	705248	1	FELT SEAL
13	705702	3	YOKE ASSEMBLY
14	705578	1	POCKET SHIELD SUPPORT (OPTIONAL)

*Allows hopper to tilt open without stub removal but does not agitate material.